

 

INSERTING BATTERIES:

Open the battery cover (batteries are not included).


Put in 3 batteries, make sure the +/- ends match the illustration.

The light will turn on and the cuckoo will chime for 3 seconds to show power is on.

Close the battery cover after the batteries are in correctly.

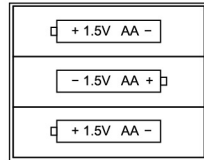



x 3

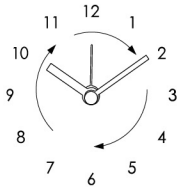

TIME:

Turn the time setting knob in the direction of the arrow to set the current time.

  ⚠ DON'T TOUCH THE CLOCK HANDS DIRECTLY.




ALARM:

Turn the alarm setting knob in the direction of the arrow to set the alarm time.

Switch the alarm to "ON".

ON/OFF SWITCH:

When the alarm is on, switch it to off to make the cuckoo fly back and stop chiming.

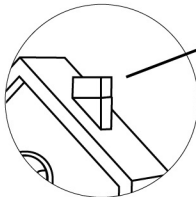


SNOOZE BUTTON

WHEN THE ALARM IS OFF:

Press the snooze button to stop the cuckoo from chiming or moving.

When the alarm is on:

 Press the snooze button to make the cuckoo fly back and stop chiming. The alarm will resume after 5 minutes.



DEMO

DEMO BUTTON:

Press DEMO to make the cuckoo fly out and chime. It will fly back and stop chiming afterward.

⚠ NOTE: ALL BUTTONS ARE DISABLED DURING DEMO MODE.

