


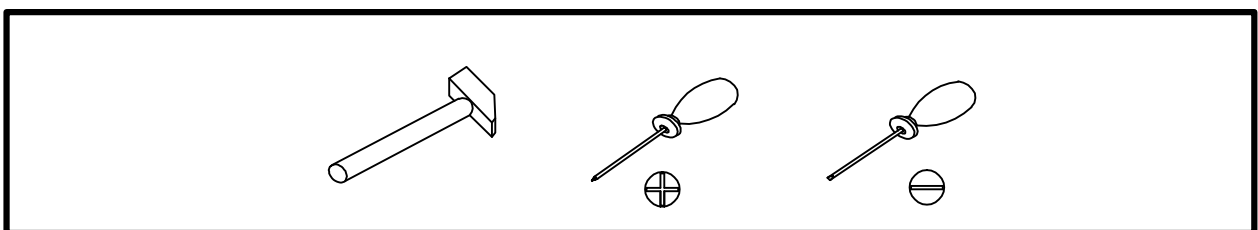
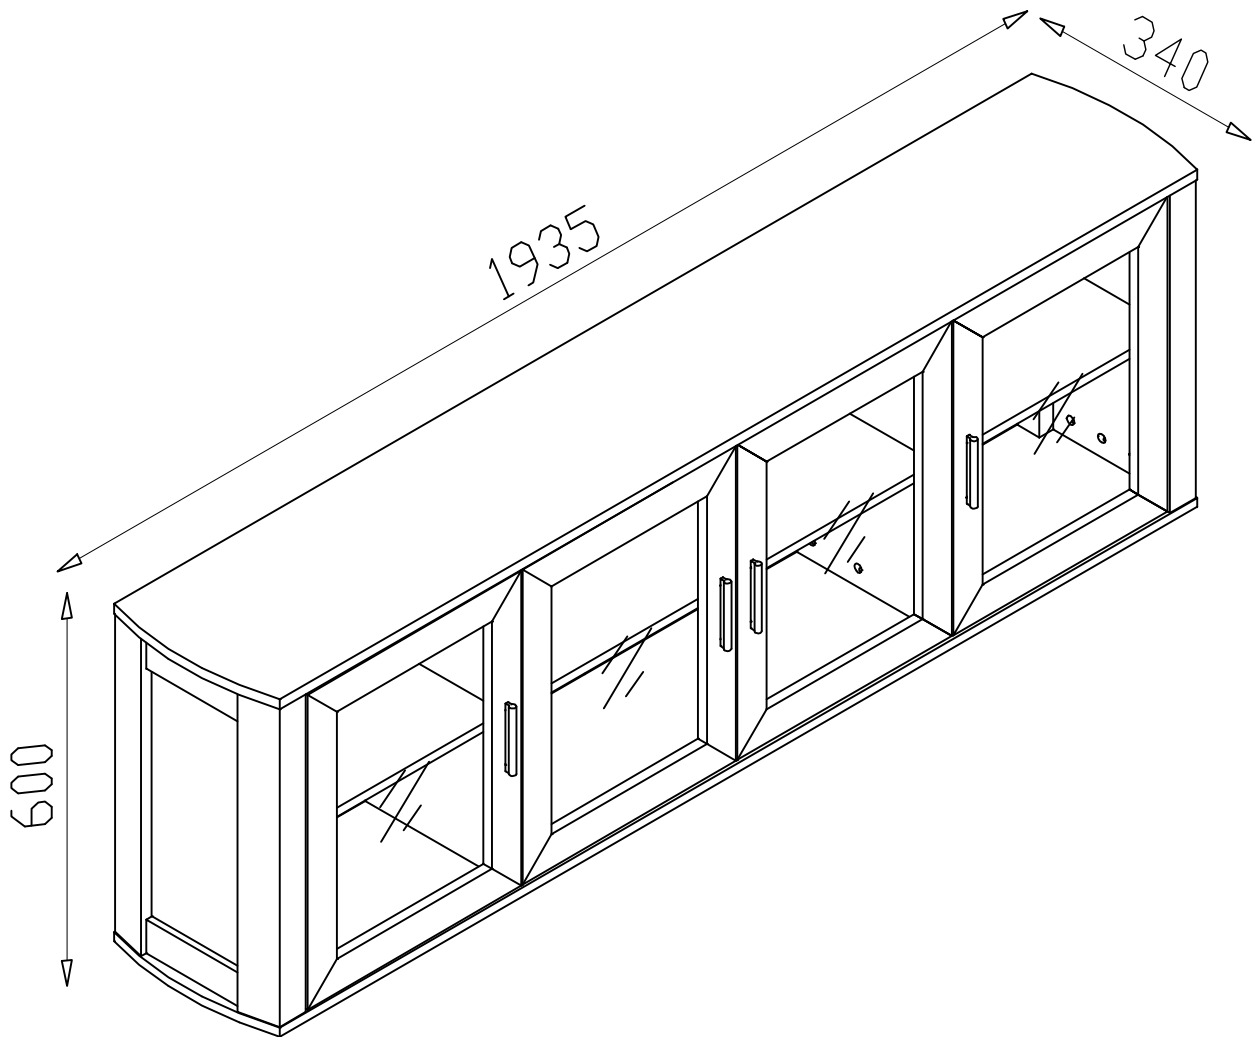
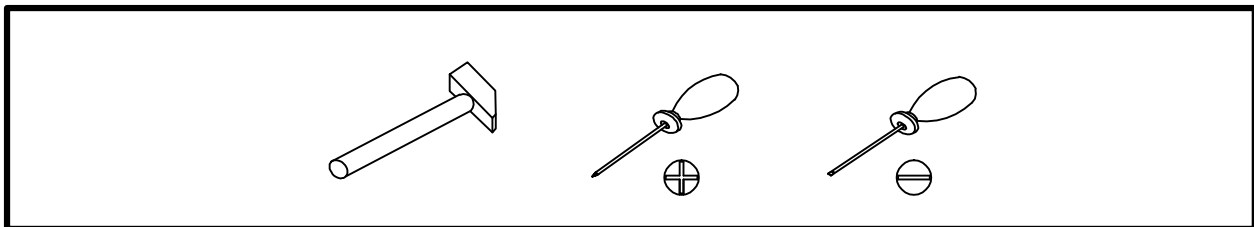
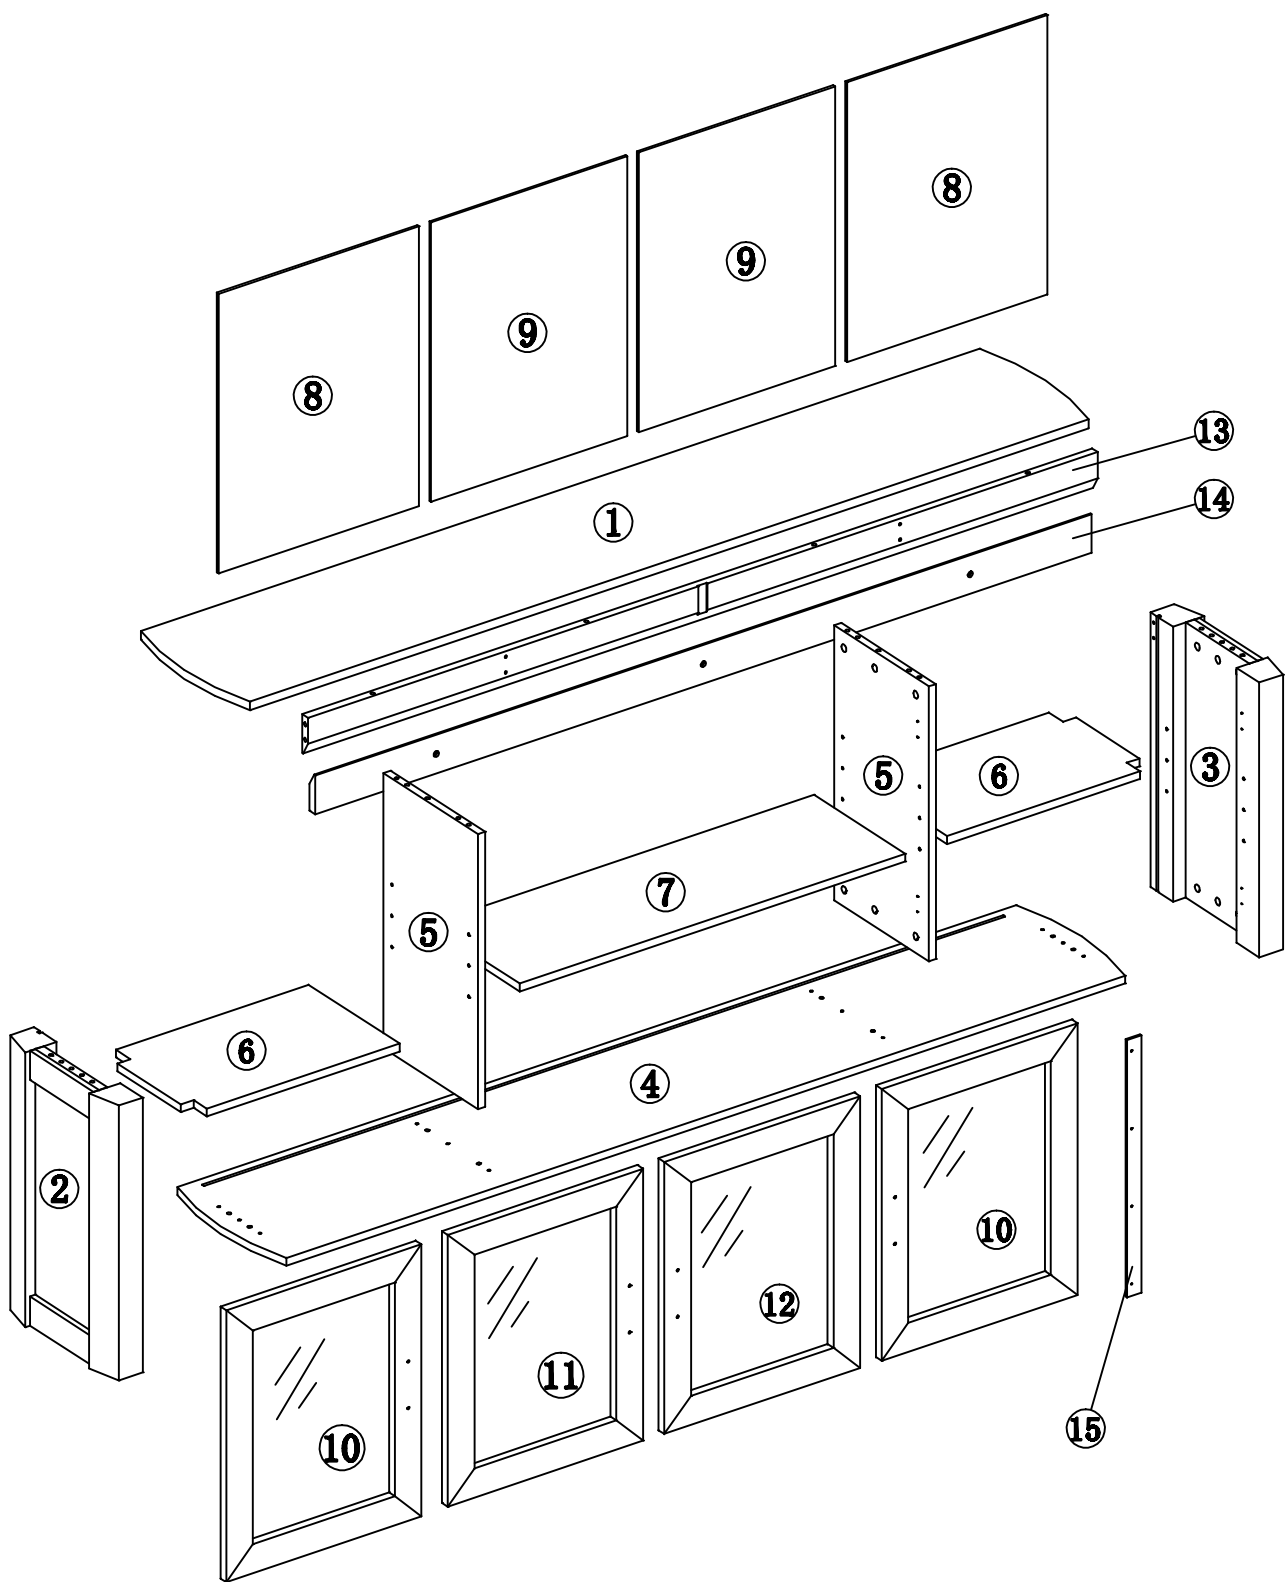



201613, 0011

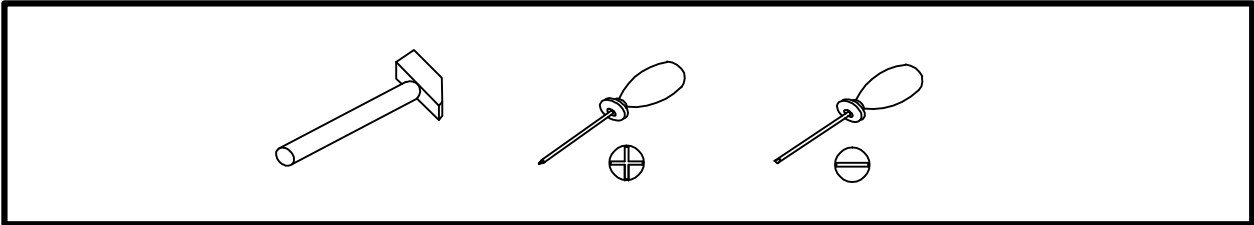

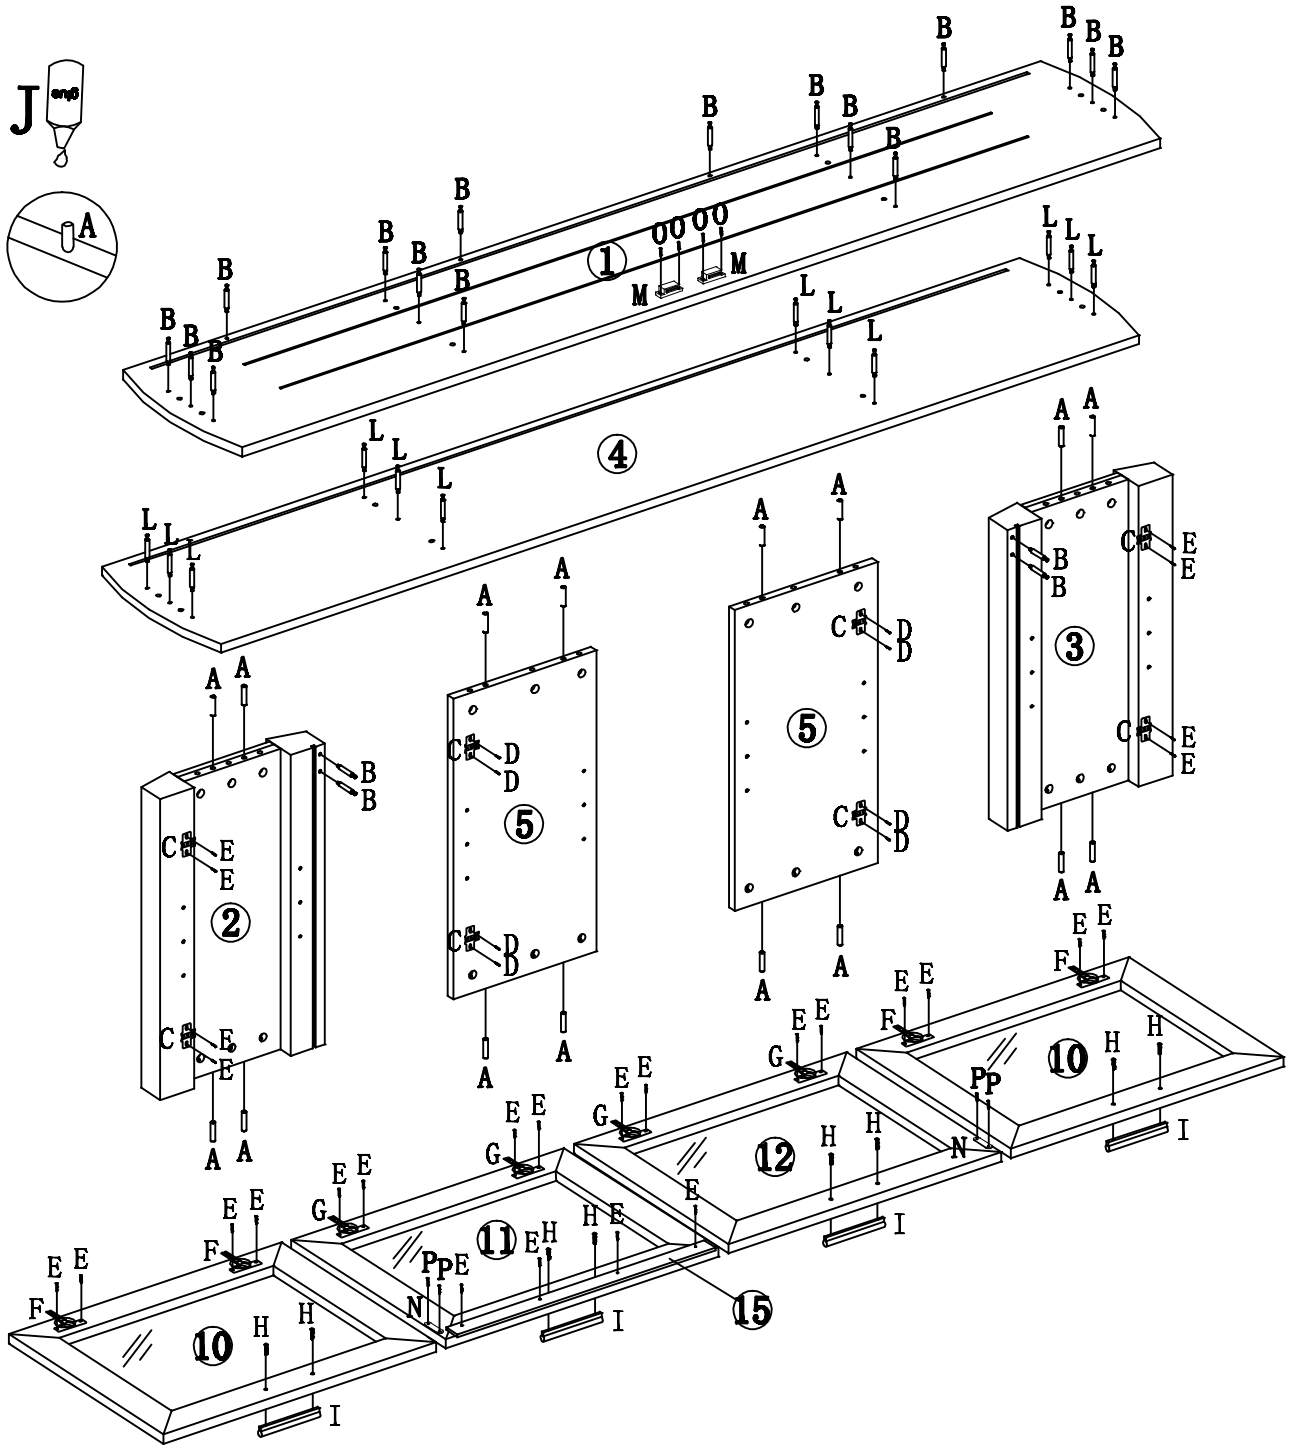


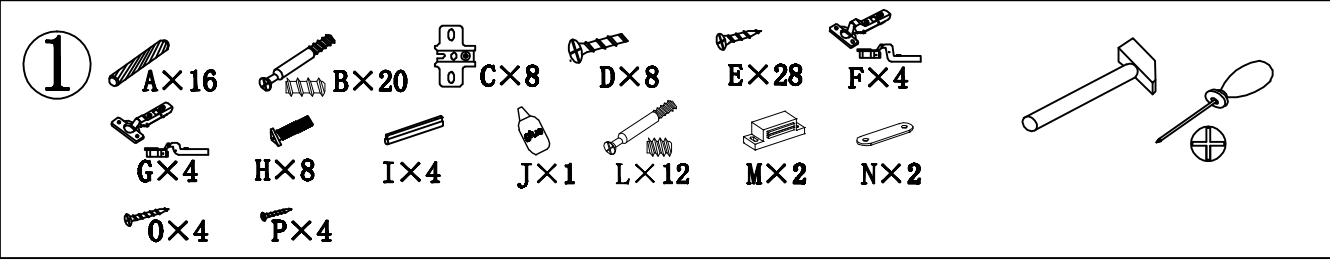





2

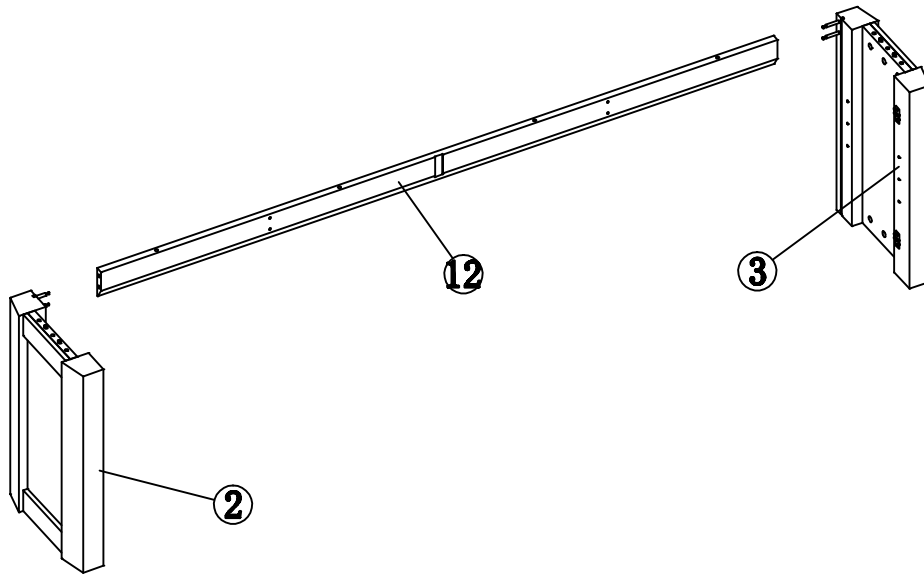

3

 K×12

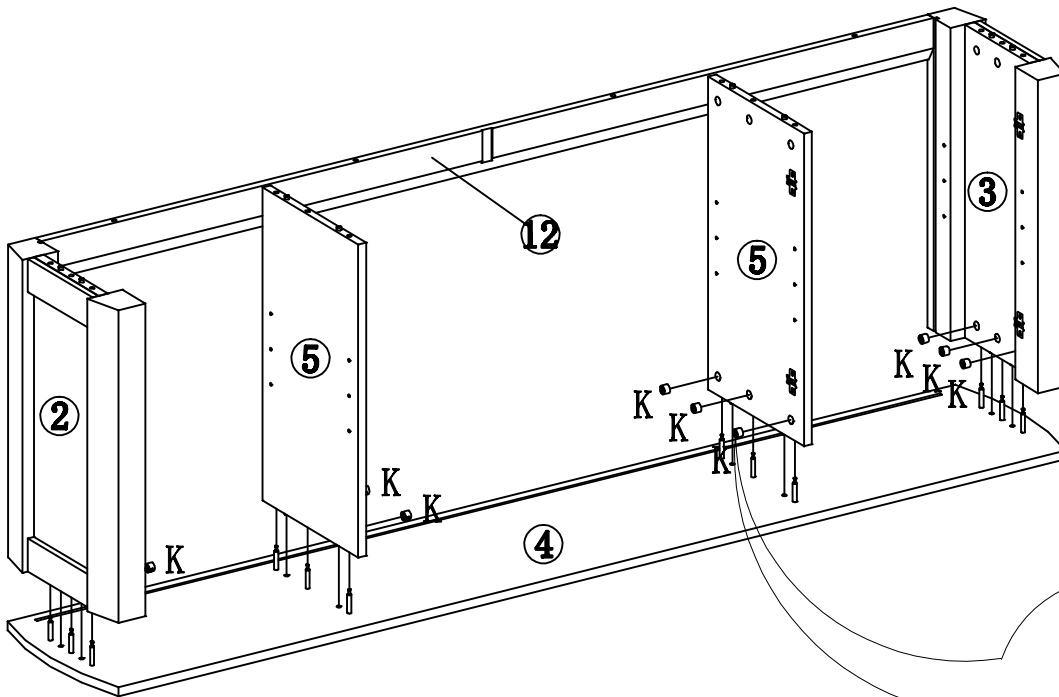
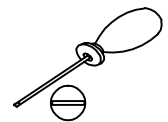


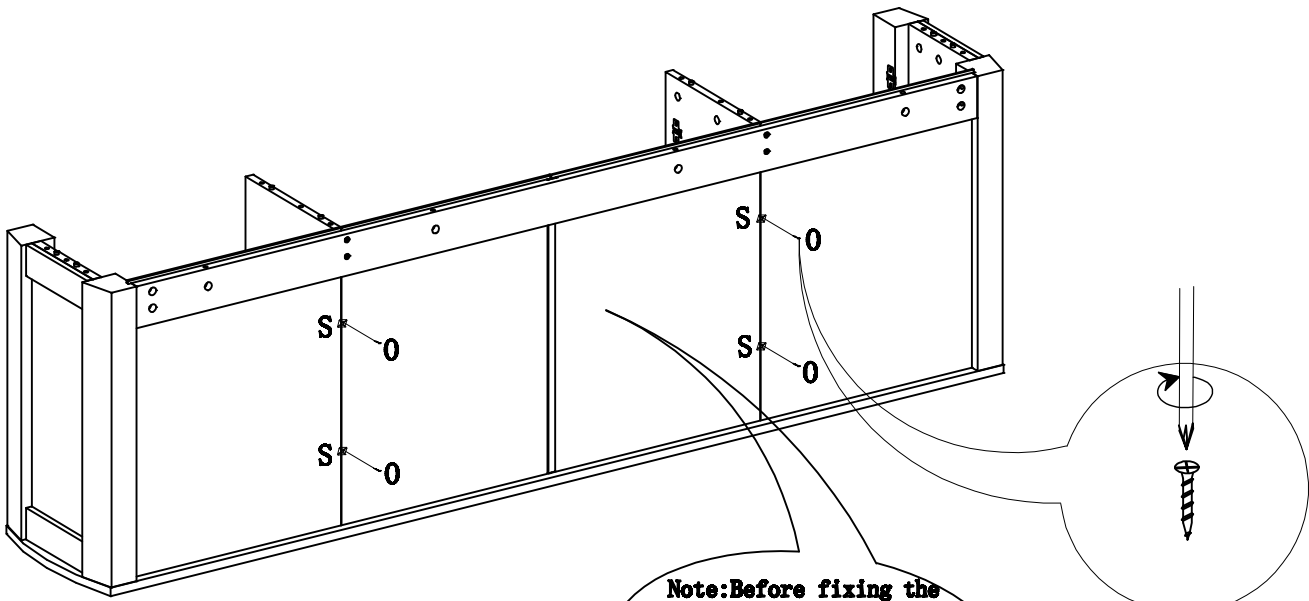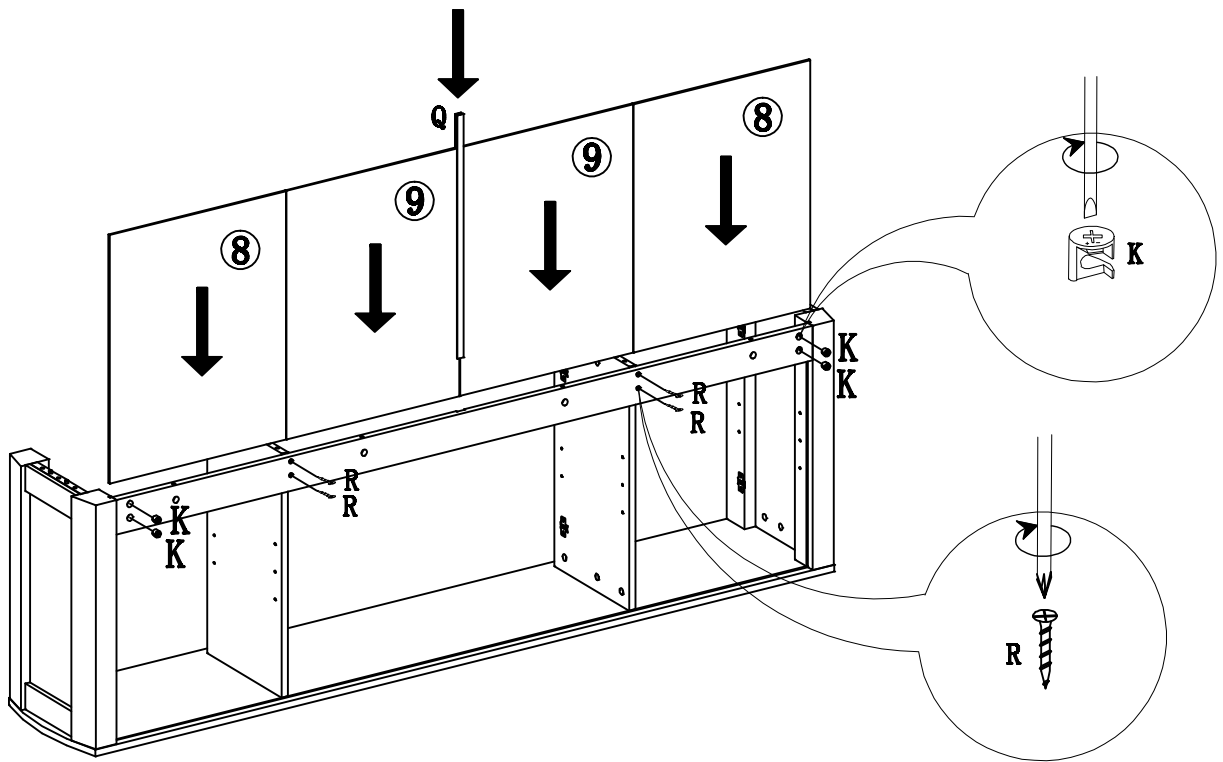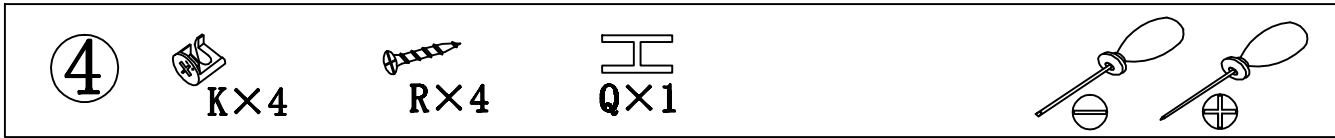

Note: Before fixing the back panel, please make sure the diagonals of the back panel have the same length.


6

 K×16

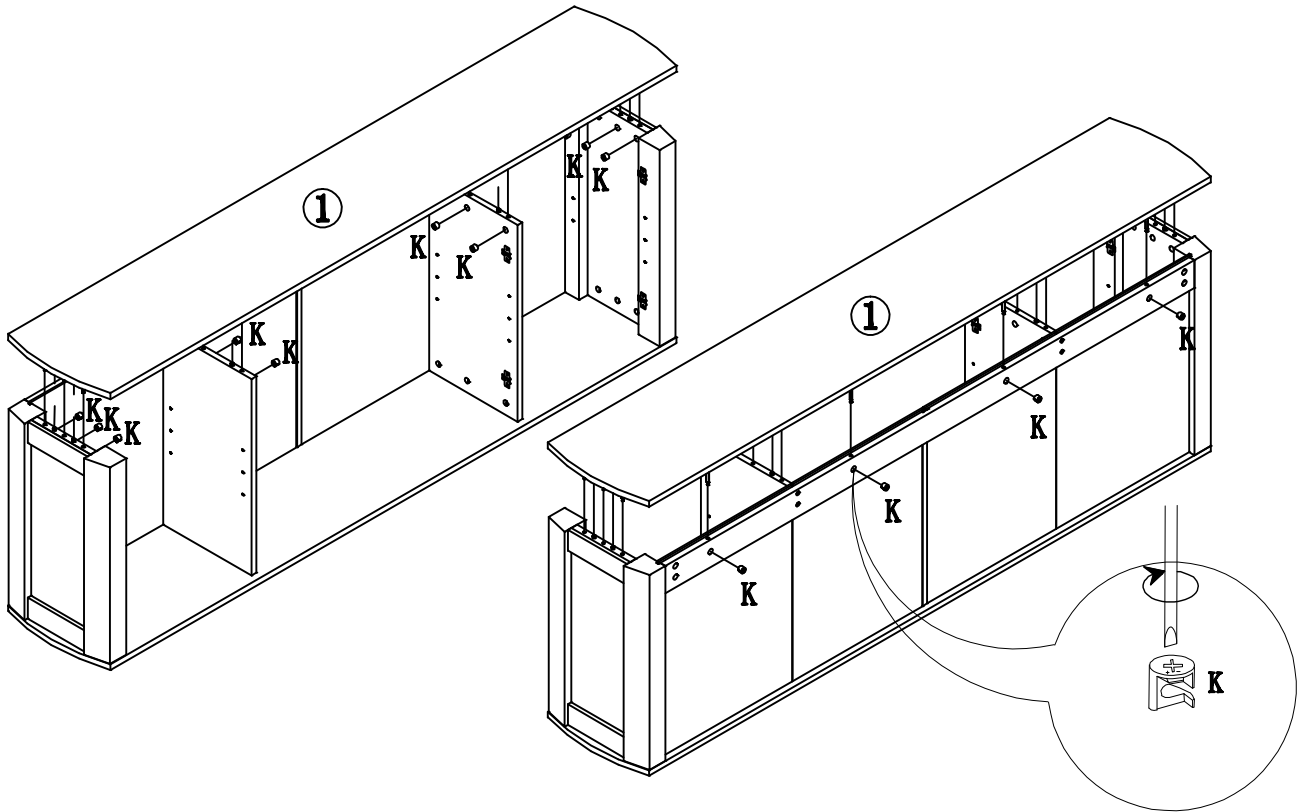

7

 T×12

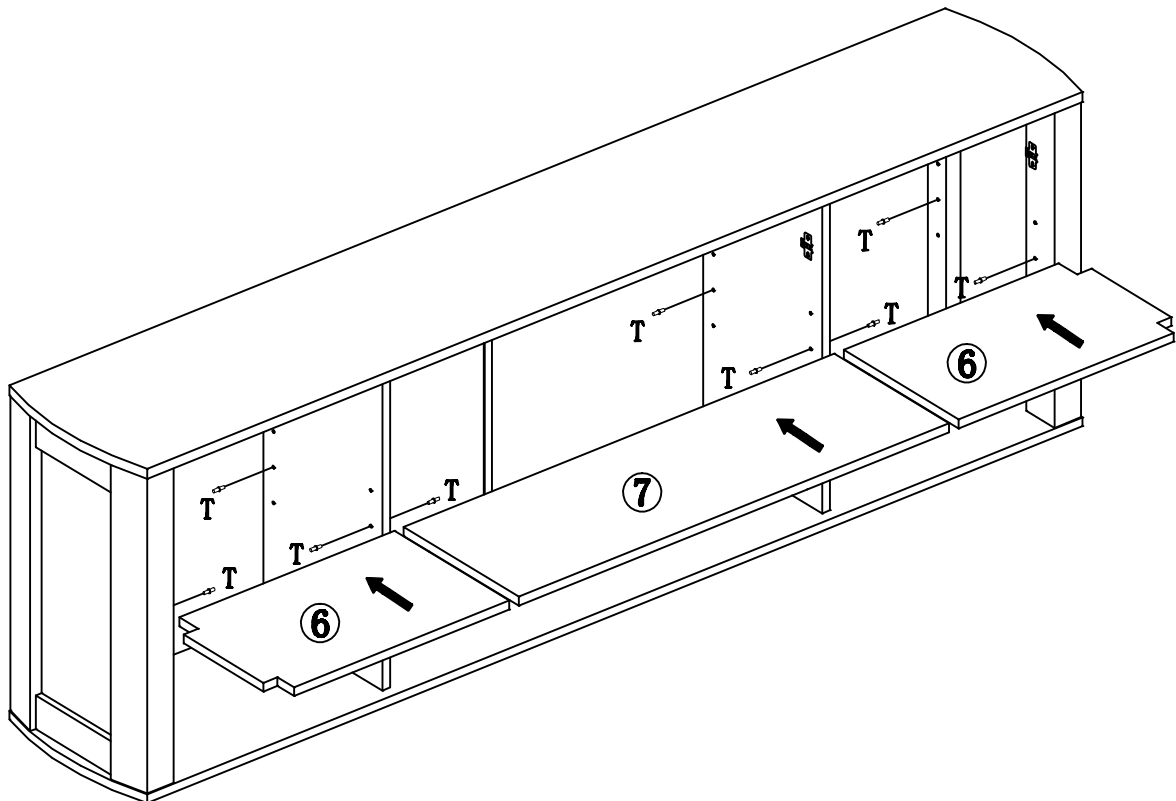

8

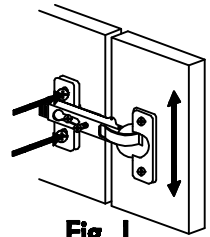
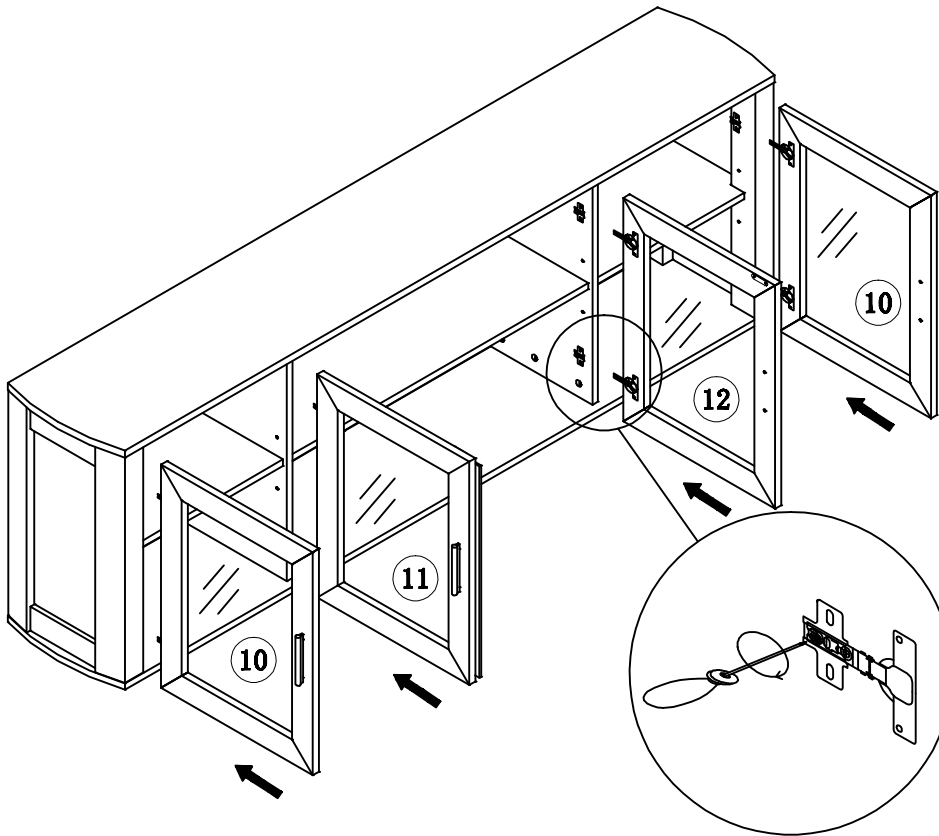


Fig. 1

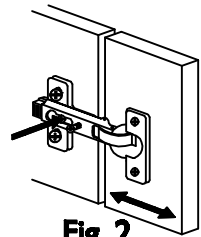


Fig. 2



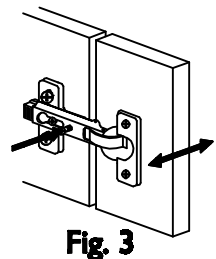


Fig. 3


9

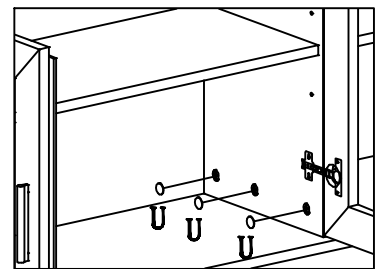




U x 24

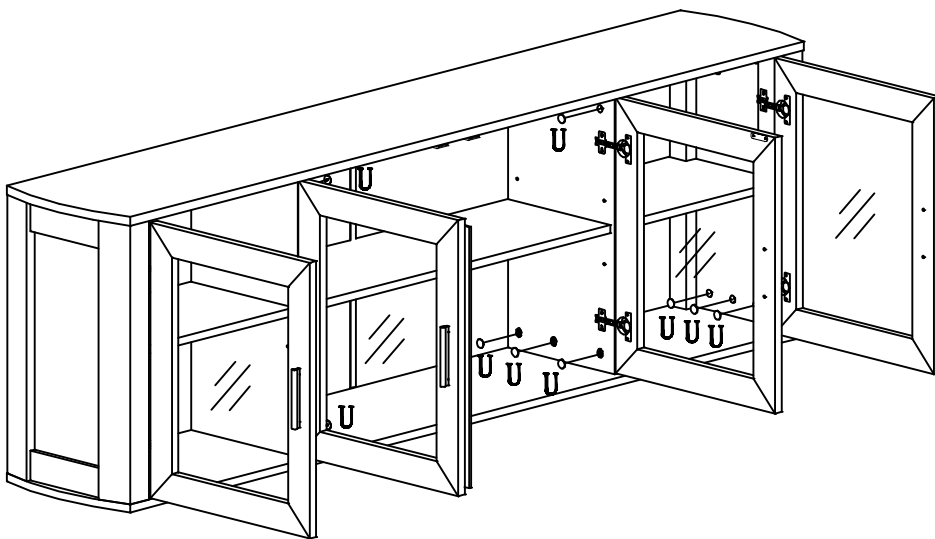

10



WALL

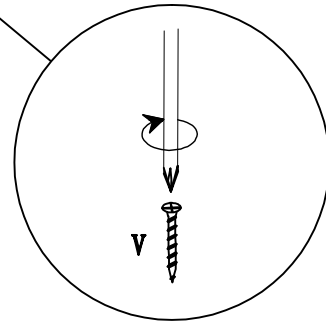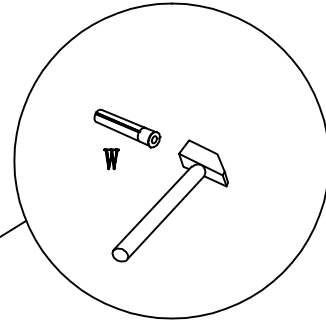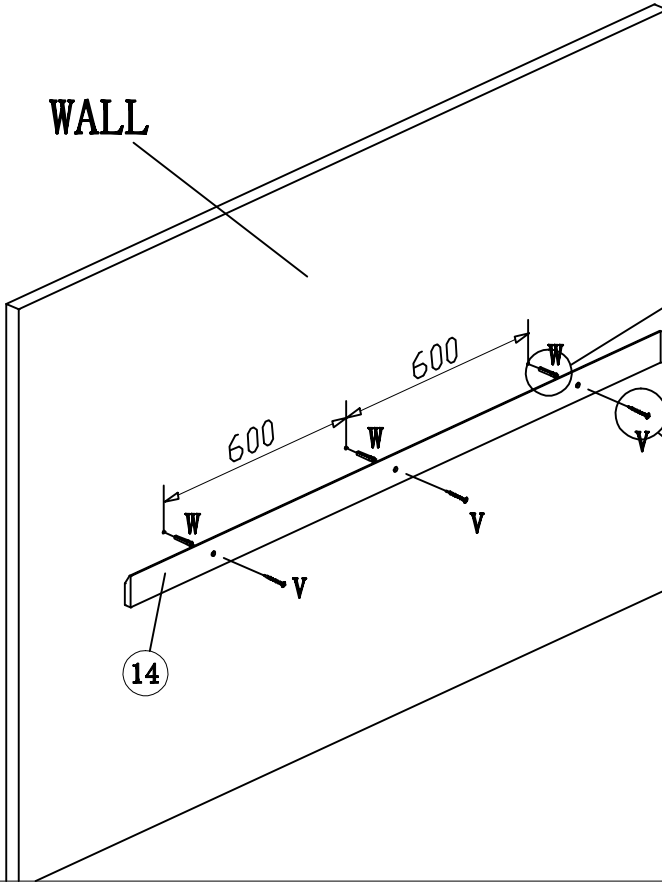

11

